



Daisy Covers and Rollers are designed to work together smoothly.

At this stage the cover is trimmed, installed and on the pool water.

1 Centre assembled roller to pool (roller is approx 150mm wider on each end). Align cord attachment (Feather Plugs) on the tube and mark about 100mm in from the end cut of the pool cover and punch a hole with the wad punch supplied.

2 Install eyelets. Under the punched hole place the male half on the ground and female on the top. Tap together..


3 Secure cord to cover and roller. Tie a loop at one end and attach to Feather Plug on roller.

Thread other end through cover eyelet and tie off to cord adjuster or Bowline knot.

4 Repeat for all cord attachments. If your pool has a curved end then you may only need to use 3-4 anchoring points.

5 Adjust the cords with the cord adjuster so that the cover comes onto the roller tube evenly. Start from the centre and work out to the ends on both sides aiming to set cords to retrieve evenly.

Minor adjustments may be needed to fine tune the settings for smooth cover recovery.

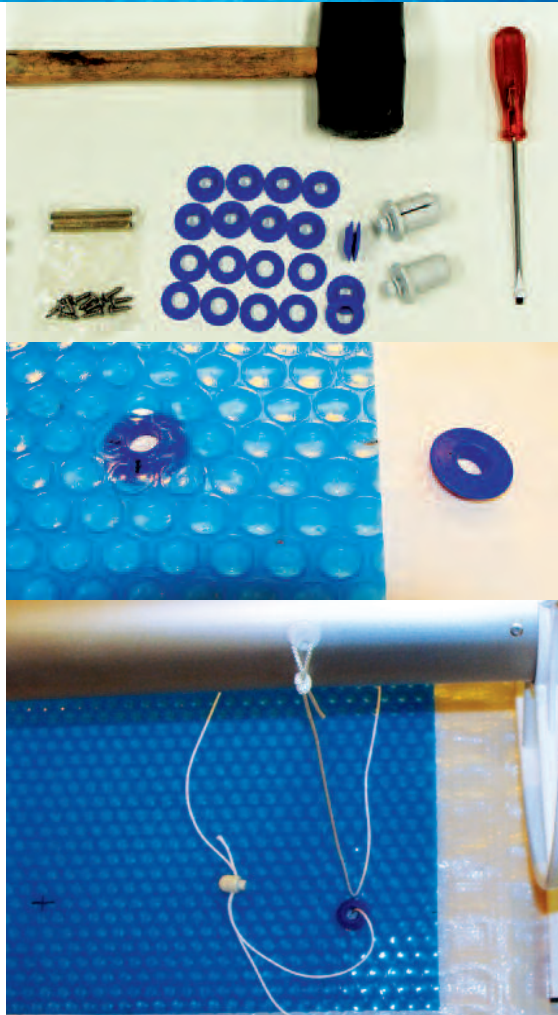

utc

Daisy Saves

The quick and easy way to assemble a roller and pool cover.



Installing
UTC, Buddy Roller
& connecting
a Daisy Cover



Daisy is Australia's largest supplier of pool covers and rollers.
Your UTC Roller System comes with a 5 year Pro Rata Warranty.
Please retain proof of purchase
Call: 1300 551 811
Fax: 1300 885 242



www.daisypoolcovers.com.au



Installation Procedure

UTC 100/75

Buddy Roller

UTC Above Ground

1) Extend the roller out evenly so that it is approximately 300mm wider than the widest point of the pool. Note: *you may have to hand saw tubes down to size*

Lock the sections in place by drilling 4mm hole then inserting the three stainless steel self-tapping screws equal distance around the centre tube, 100mm in from the end, from each side. Place the tube evenly across the pool.

2) UTC: Place the end slug on the ground with the extended aluminium shaft upwards. Clip each handwheel to the end slugs by pressing firmly. Insert the 3 screws & tighten. Slide the leg onto the aluminium axle, ensuring that the extended section on the leg top is facing the handwheel. Insert the End Plug into the End Slug. Finger tighten Bolt Nut only.

For UTC, Buddy Rollers and Daisy Above Ground Kit

Put the leg into the roller foot. Press the anti-skid plugs into the holes under the foot. Blanket Buddy: Slide crank into each end of the roller - put into yoke and insert pin.

3) Slide the end slug (or crank) into each end of the roller. Using the

indicator marks on the outside of the end slugs, drill 3 X 4mm holes and install the three screws on each end, 35mm in from the end of the tube.

4) With your roller sitting at right angles to your pool, and evenly centred, mark the centre of the roller and drill a 6mm hole. Measure out 600mm from each side of this hole and drill on the same centre-line. Continue this procedure until you have reached the outside of your pool.

5) Tap your feather plugs into these holes.

6) Wrap one end of the cord around the feather plug and pull gently into place (the cords should self lock into the feather plug - however a locking knot may be required). In line with each feather plug, punch a hole in the blanket approximately 100mm in from the end of cover with the punch provided. Install the eyelets by placing the male section on the ground, place the cover on top, place the female section on the top of that and gently tap together. Tie the cord to the cover.

Working one way, evenly tie the rest of the cords to the cover. Then, working from the centre again, tie the remainder of the cords to the blanket. If your pool has a curved end.

You may only use 3 or 4 cords to remove your pool cover.

Roller Kit Includes

- One Tube Kit
- 3 X tubes: 2 one size, 1 Joiner
- Two Handwheels or handles
- Two End Frames
- Two End Slugs
- Twelve Screws
- Two End Plugs
- One OverCover Kit

1 X Overcover Sheet, 2 X stretch straps, 6 X white eyelets


Cover Connection Kit

- Ten Eyelets
- Ten male / Ten female
- One Eyelet Punch
- Ten Feather Plugs
- Ten 2metre Cords



Equipment Needed

- Rubber Mallet
- Philips Screwdriver
- Block of wood (for hole punching)
- Drill - cordless if working around pool water.
- Hammer


Frames connect to Rollerfoot or Bracket for Above Ground Kit.

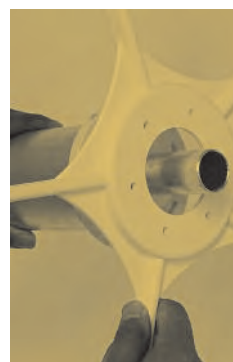

Step 2-Slide handwheel onto end slug

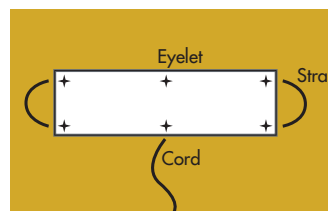


OverCover must be on rolled up Daisy Pool Cover for UV protection.

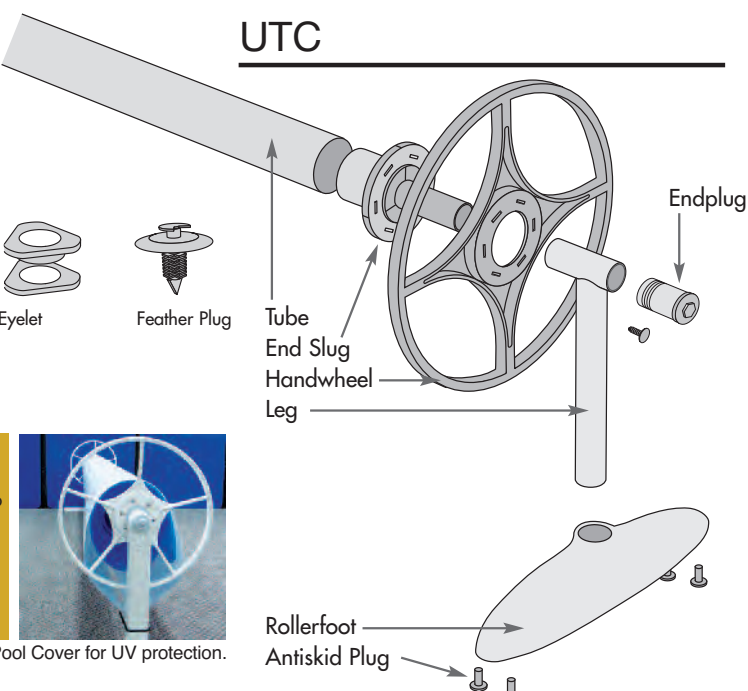

How to put your overcover together


- 1 Cut the overcover to size ie: over the roller between the handwheels.
- 2 Make a hole in each corner of the overcover and the centre of each side - as per diagram.
- 3 Place the male blue eyelet section on the ground.
- 4 Place the hole in the overcover over the male eyelet section.
- 5 Place the female section on the top of the male section and tap together with a hammer.
- 6 Repeat for the other 5 holes.
- 7 Tie the cord to one of the middle eyelets.
- 8 Place the metal hook of the elastic strap in an end eyelet and close it with pliers so it cannot come off. NOTE: Never Overextend elastic straps as injury may result.
- 9 Repeat for the other end of the strap.
- 10 Repeat 8 & 9 for the other end of the overcover.
- 11 Place overcover to the top of the roller and wrap one strap around the handwheel.
- 12 Place the other strap over the handwheel.
- 13 Tie the middle cord.
- 14 Your overcover is now installed.

Always use your overcover when your cover is rolled up onto your roller and off the pool water.

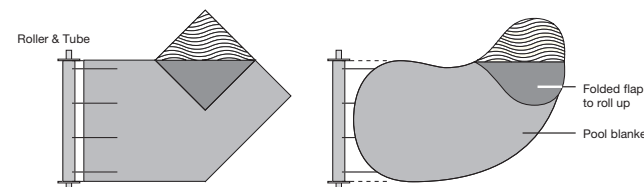

Locate roller at opposite end of extended area - Fold over to roll up.

Buddy

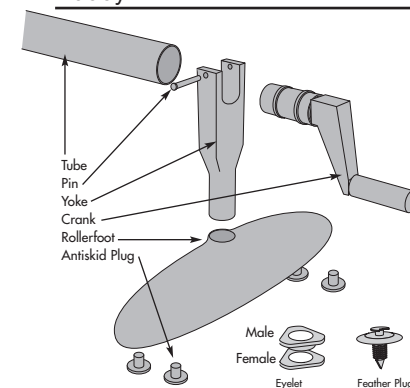

Above Ground Kit

